ANDERIC
Master Instruction Manual

Applicable for models: RRH100, RRHC100

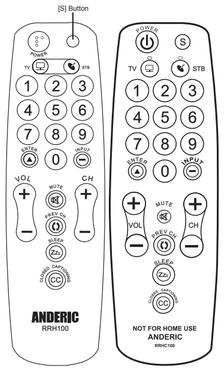

Introduction

We want to thank you for purchasing this Universal Hospitality remote by Anderic®. With the purchase of this remote you should receive a screw for the battery cover. Battery cover screw is optional; battery cover does not need screw to hold it in place. This remote requires two AAA size batteries, not included.

Optional Security Cable Attachment

Optional Security Cable available from anderic.com, Part number: CBL01. This cable easily adheres under the battery cover for a secure and flush appearance.

Pre-programmed Codes

This remote is pre-programmed by default to LG and VIZIO TVs under TV mode and DirecTv under STB Mode (Set-Top-Box). If the TV or STB is not one of the brands above, you must program the remote using the directions below:

NOTE: If [S] key is not present on your remote, note that it is the unmarked button to the right of the [POWER] key.

Programming the remote: Direct Code Input Method

1. Turn on the device you want to control, and find the corresponding brand code from attached code list.
2. Press and release the device mode key you would like to program ([TV] or [STB]).
3. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
4. Input the four digits code. If remote successfully saved code, indicator light will go out. If error, indicator light will blink slowly three times and go out, repeat steps 1-4.
   a. Check if most keys of remote control can control the device, if not, please restart step 1-4 using a different code.
   b. After trying all codes for your brand without success, please try "Programming the remote - Code Search" method below.

Note: During the programming mode, pressing any button other than number buttons or not pressing any button for 10 seconds will cause remote to exit programming mode.

Programming the remote: Code Search Method

Note: use this method if your brand is not listed in the codes attached, or if all the codes you tried does not work. This method scans through each code in the database.

Manual search

1. Turn on the device you want to control.
2. Press and release the device mode key you would like to program ([TV] or [STB]).
3. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
4. Repeatedly Press [CH+] to search forwards or [CH-] to search backwards; remote will send the code of POWER one by one.
5. When device is turned off, immediately press [S] button to save and exit. Check if most keys of remote can control the device, if not, please restart from step 1, remote will pick up where it left off in code database.

Auto search

1. Turn on the device you want to control.
2. Press and release the device mode key you would like to program ([TV] or [STB]).
3. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
4. Press and release [POWER] key, mode indicator light will blink one time and continue to blink every 2 seconds. Remote is sending codes of POWER one by one. If to press [CH+] / [CH-] can change the searching direction.
5. When device is turned off, immediately press [S] button to save and exit. Check if most keys of remote can control the device, if not, please restart from step 1, remote will pick up where it left off in code database.

Code Display

About: use this method to display the code that is currently programmed.

1. Press and release the device mode key ([TV] or [STB]) in which you want to display programmed code for, then follow steps below:
   a. Press and release keys [MUTE] and [1] simultaneously, then release. The LED flashing times represents the first digit of code. Note: If digit is 0, the LED will not flash.
   b. Press and release keys [MUTE] and [2] simultaneously, then release. The LED flashing times represents the second digit of code.
   c. Press and release keys [MUTE] and [3] simultaneously, then release. The LED flashing times represents the third digit of code.
   d. Press and release keys [MUTE] and [4] simultaneously, then release. The LED flashing times represents the fourth digit of code.

Note: If digit is 0, the LED will not flash.

Single Press Combined POWER Key

About: This allows for powering on/off both your TV and STB (Set-top-box) with one press of the [POWER] button. If enabled, pressing [POWER] key will send code for power for both units. If disabled, pressing [POWER] key will only send code for TV. See steps below.

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Device mode indicator light will light. It doesn't matter which mode lights.
3. Input code [9] [9] [9] [5].
   a. Enabled – (0 blinks): If LED turns off directly after inputting the four digits, this indicates that "one key power-off all devices" was successfully Enabled;
   b. Disabled – (2 blinks): If LED blinks 2 times after inputting the four digits, this indicates that "one key power-off all devices" was successfully Disabled.

Note: After one key power-off all devices successfully enabled, press [POWER] key, it will send STB Power immediately followed by TV Power code.

STB (set-top-box) Punch-Through Function

About: When enabled, this feature allows assigning the STB related keys to always send codes programmed under STB mode, no matter what mode the remote currently resides. This feature has been enabled by default. Keys affected are: 0 thru 9, Enter, Prev CH, CC, CH+ and CH-. Follow steps below to enable or disable this feature.

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Device mode indicator light will light. It doesn't matter which mode lights.
3. Input code [9] [9] [9] [0].
   a. Enabled – (0 blinks): If LED turns off directly after inputting the four digits, this indicates that "STB punch-through" was successfully enabled;
   b. Disabled – (2 blinks): If LED blinks 2 times after inputting the four digits; this indicates that "STB punch-through" was successfully disabled.

TV Punch-Through Function

About: When enabled, this feature allows assigning all TV related keys to always send codes programmed under TV mode, no matter what mode the remote currently resides. This feature has been enabled by default. Keys affected are Power, VOL+, VOL-, Mute, Input and Sleep. Follow steps below to enable or disable this feature.

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Device mode indicator light will light. It doesn't matter which mode lights.
3. Input code [9] [9] [9] [1].
   a. Enabled – (0 blinks): If LED turns off directly after inputting the four digits, this indicates that "TV punch-through" was successfully enabled;
   b. Disabled – (2 blinks): If LED blinks 2 times after inputting the four digits; this indicates that "TV punch-through" was successfully disabled.

Individually assign key Punch-through Lock

Note: Before proceeding; the following features must be first DISABLED: "TV Punch-through Function," "STB punch-through Function," and "Single Press Combined Power Key." Applicable to all buttons except for: [S], [TV], [STB]. To re-assign a key to different mode, you first unlock the key using steps from Individually Assign Punch-through Unlock section below, then repeat steps 1-4 to reassign it to correct mode.

About: This allows for individually assigning keys to "punch-through" to the mode of your choosing. After enabling punch-through, the key will always send code for assigned mode no matter what mode the remote currently resides.

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Input the 2 digits code [9] [8].
3. Press the button you want to lock.
4. Press the device mode button you want assign it to (e.g. [TV] or [STB]). If successful, LED will turn off directly after pressing the Mode button. Repeat steps 1 – 4 for each button lock.

Individually Assign Punch-through Unlock

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Input the three digits [9] [0] [0],
3. Press the button you want to unlock the punch-through, the LED will blink one time & turn off.

Device Mode Lock

About: This is used to lock the code for the device so they cannot be re-programmed. After device is locked, the current code cannot be changed, and any other operation is invalid unless you repeat steps 1-3 to unlock first.

1. Press and release the device mode key you would like to lock code for ([TV] or [STB]).
2. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
3. Input code [9] [9] [9] [9],
   a. Locked - If LED turns off directly after 4 digits input, it indicates mode successfully locked.
   b. Unlocked - If LED blinks 2 times and turns off after 4 digits input, it indicates mode successfully unlocked.

Reset to Factory Default Status - Unchanging 1-Device/2-Device Status

Note: This restores remote to factory default status while keeping the currently programmed 1-Device or 2-Device mode.

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Input code [9] [9] [9] [6]. Indicator light will turn off, indicating that the remote has been reset to factory default status.

Reset to Factory Default Status

Note: This restores remote to factory default status, changing the remote back to its original 1-Device or 2-Device mode (RRH100 & RRHC100 = 1-Device, RRH200 & RRHC200 = 2-Device).

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Input code [9] [7] [6] [0]. Indicator light will turn off, indicating that the remote has been reset to factory default status.

Advanced Option: Shift remote to 1-Device; TV only remote.

Note: This feature allows remote to switch from a 2-Device remote to a 1-Device; TV only remote. STB mode will be deactivated. Remote will be reset to factory defaults for 1-Device.

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Input code [9] [7] [6] [1]. Indicator light will blink 3 times, indicating that the remote has successfully been reset to factory default status and converted to a 1-Device remote.

Advanced Option: Shift remote to 2-Device; TV/STB remote.

Note: This feature allows remote to switch from a 1-Device remote to a 2-Device; TV and STB enabled remote. Both modes will be activated. Remote will be reset to factory defaults for 2-Device.

1. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
2. Input code [9] [7] [6] [2]. Indicator light will blink 3 times, indicating that the remote has successfully been reset to factory default status and converted to a 2-Device remote.

Disable/Enable [INPUT] key

3. Press and hold [S] and [ENTER] keys simultaneously for about three seconds until indicator light lights and remains on, release both keys.
4. Input code [9] [7] [6] [9].
   a. Enabled – (2 Blinks): LED indicator light blinks 2 times after inputting the four digits; this indicates that the input key function is enabled.
   b. Disabled – (0 Blinks): LED indicator light turns off directly after inputting the four digits, this indicates that the remote's input key function has now been disabled.

Low Battery indication – If both mode keys light when pressing a key, this means batteries need changing.

LEGAL: Anderic® is a registered trademark of Dan's Electronics Etc., Inc. All rights reserved. This document is copyrighted.

TV CODES

Note: The following codes can be programmed under TV mode only.

Admiral	1917 1927
Advent	1933
Akai	1930 1939 1999 2025 2330
AOC	1964 1985 2029 2032 2073
Apex Digital	1931 1934 1952 2065
APPLE	2412
Audiovox	1926 1937 2011 2012 2021 2035
Anderic	2326
Aventura	1922
Broksonic	1927 2025
Carver	1915
Celebrity	1911
Celera	1934
Changhong	1934
Citizen	1916 2025
CISCO	2503
Coby	1992 2049 2051 2054 2055 2056 2596
Commercial Solutions	1971 1910
Crosley	1911 1915
Curtis	2057 2070
CurtisMathes	1910 1915 1916 1917 1919 1926 1930 1996
Daewoo	1926 1996
Dell	1957
Denon	1919
Digital Stream	2390
Dish	2391
Dumont	1912
Durabrand	1922 1923 1927 2087 2088 2120 2121 2122 2123 2124 2125 2167 2168 2169 2170 2171
Dynex	1974 2030 2038 2085 2086 2475 2497 2501 2116 2117 2118 2119
Electroband	1911
Electrograph	2009
Electrohome	1927 1998
Element	2001 2023 2037 2349
Emerson	2341 1922 1923 1926 1927 1967 1996 1997 2019 2026
Emprex	1969
Envision	1964 1985 2029 2032
ESA	1939 1922 2026
Funai	2326 2346 2342 1911 1922 2026
Gateway	2009
GE	1910 1913 1923 1926 1971 1981
Generalinstrument	2393 2397
GFM	1922 1997 2026 2036
Gibralter	1912
GoldStar	1923
Haier	2007 2008 2050 2340 2345 2346 2588 2411
Hallmark	1923
Hannspree	1962
Harman/Kardon	1915
Havermy	1917
Hello Kitty	1926
Hisense	2344 2343 1931 1995 2033 2058 2089 2090 2091 2092 2093 2126 2127 2128 2129 2130 2131 2172 2173 2174 2175 2509 2510 2519 2531 2442 (roku)
Hitachi	2337 2349 2340 1994 1919 2337 2579 2580 2581 2583 2584 2586 2587 2591 2598 2530 2533
iLo	1967 1997 2000
Infinity	1915
Insignia	1970 1983 1927 1922 1995 2002 2024 2026 2030 2094 2095 2096 2097 2098 2099 2101 2102 2103 2104 2105 2106 2107 2108 2109 2110 2111 2132 2133 2134 2135 2316 2137 2138 2139 2140 2141 2142 2143 2144 2145 2146 2147 2148 2149 2167 2176 2347 2485 2488 2498 2499 2500 2534 2535 2518 2532 2479 2443 (Roku) 2444 (Roku)
Inteq	1912
JBL	1915
JCB	1911
Jensen	1933
JVC	2421 2420 2423 2422 2419 1914 1927 1955 1987 2013 2585 2599 2600 2601 2603 2604 2605 2484 2045
KDS	1977 2001
KLH	1934
LG	2418 2447 1970 1971 19121923 2059 2066 2465 2466 2467 2489 2511 2517 2524 2446 (Roku)
LXI	1910 1915 1921 1923
MAG	1977 2001
Magnavox	1913 1915 1922 1937 19641972 2018 2009 2020 2026 2496 2062
Marantz	1972 1915
Matsushita	1924
Maxent	2009
MB Quart	2021
Megatron	1919 1923
Memorex	1920 19231927 1998 2024
MGA	1920 1923
Midland	1910 1912 1913
Mitsubishi	2327 1917 1920 1923 1954 2342 2473 2493
Motorola	1917
MTC	1916
NAD	1921 1923
NEC	2015
NetTV Nexus	2009
Electronics	2037
Nikko	1923
Norcent	1931 1964 1985
Olevia	2332 1953 1961 1989
Optimus	1924
Optoma	1962
Optonica	1917
Orion	1927 1974
ONN	2590 2595
ONY	2339
Panasonic	1913 1924 1959 1973 1975 2458 2504 2045
PARK	2034 2041
Penney	1910 1921 1913 1916 1923
Petters	1979
Philco	1915 1922 1967 1997 2026
Philips	2325 2348 2411 1915 1972 2020 2006 2018 2062 2063 2325 2594 2486 2525 2537 2538 2539
Pioneer	1973 2398
Polaroid	1934 1958 1977 1979 2001 2331 2332 2334 2011 2012 2035
Portland	1926 1996
Prima	1933
Prism	1922
Proscan	1910 1971 2044 2589 2597 2472 2582
Proton	1923
Proview	1977 2001
Popk	2476
Pulsar	1912
Quasar	1913 1924
RadioShack	1910 1923
RCA	1910 2347 1913 1917 1971 1981 1996 2014 2040 2042 2474 2490 2491 2512 2513 2520 2528 2494 2067
RCA BED	2426 (bed1) 2430 (bed2) 2431 (bed3)
RCA R130j1	2456
RCA R130k1	2454
RCA R130k2	2455
RCA R130D1	2437 2438 2439 2440 2441
RCA R230D2	2427 2433 2434 2435 2436
RCA LED BED	2424 (bed1) 2425 (bed2) 2432 (bed3)
RCA ONCOBRP	2429 (bed1) 2428 (bed2)
RCA KM38R01/02	2415 2416
RCA R230D1/2	2413 2414
Roku Player	2457
Realistic	1923
Runco	1912
Sampo	2009
Samsung	2331 1916 1923 1930 1939 1948 2031 2477 2480 2481 2482 2487 2505 2462 2470 2515 2523
Sansui	1922 1927 1998 2024 2025
Sanyo	2328 1915 1950 2351 2593 2522
Sceptre	1945 1952 1963 1986 2081
Scientific Atlanta	2394
Scotch	1923
Scott	1923 2003
Sears	1910 1915 1921 1923 1922
SEIKI	2592
Sharp	2351 2417 1917 1940 2343 2341 2459 2460 2464 2507 2508 2514 2516 2527 2536 2471 2445 (Roku)
Sheng Chia	1917
Signature	1915
Sony	2339 2330 1911 1938
Soundesign	1923
Soyo	2017
Spectroniq	1977 2001
Squareview	1922
Superscan	1917
Supreme	1911
SVA	1931 2026
Sylvania	1915 1922 1967 1997 2019 2023 2026
Symphonic	1922
Syntax	1953 1961 1989 2327
TCL	2529 2324 (Roku)
Tandy	1917
Technics	1913 1924
Techwood	1913
Teknika	1915 1916 1920
Telefunken	1930
TMK	1923
TNCi	1912
Toshiba	2345 2335 2338 2350 1916 1921 1959 1980 2025 2028 2478 2502 2521
TVS	1927
Victor	1914
Vidikron	1915
Vidtech	1923
Viewsonic	1946 1960 1964 1984 1991 1993 2005 2009 2029 2032 2046
Viore	2000 2034 2057 2112 2150 2151 2152 2153 2154
Vizio	2329 2336 2334 2010 1946 2314 2329 2336 2602 2606 2468 2469 2495
Wards	1910 1911 1912 1913 1915 1916 1921 1923
Waycon	1921
Westinghouse White	2333 1926 1946 1952 2004 2113 2114 2115 2156 2155 2157 2158 2159 2160 2161 2162 2163 2155 2164 2165 2166 2177 2178 2461 2506
Westinghouse	1927 1996
Wyse	1964
Zenith	1910 1911 1912 1919 1923 1927 1970 1996 2463 2483
Other	2526

LG Hospitality Codes

Note: The following codes work with LG STB-2000 set to boxes and can be programmed under TV or STB mode.

BED 0	2314	BED 5	2319
BED 1	2315	BED 6	2320
BED 2	2316	BED 7	2321
BED 3	2317	BED 8	2322
BED 4	2318	BED 9	2323

Digital TV Converter Boxes

Access HD	2039
Airlink 101	2080
Alpha digital	2039
Amtc	2039
Apex digital	2072
Artec	2079
Casti	2048
Channel master	2061
Coby	2083
Coship	2076
Daewoo	2053
Daytek	2048
Digital stream	2047
Dish network	2071
Echostar	2071
GE	2060 2068
Goodmind	2068
Gridlink	2056
Insignia	1968
Lasonic	2056
Magnavox	1982
Memorex	2075
Microgem	2078
Philco	1982
RCA	2052 2069
Sansonic	2056
Sunkey	2084
Sylvania	1982
Tivax	2039
Ventura	2069
Venturer	2069
Winegard	2069
Zenith	1968
Zentech	2080
Zinwell	2077

CABLE

Note: The following codes can be programmed under STB mode only.

ABC	0747 0947 0048 0148 0248 2256 2257
Adelphia	0852 0752
Allegro	0054 0154
Americast	0354 2268
Amino	1988 2016 2305 2306 2307 2308 2309
Antronix	0448 0548
Archer	0448 0548 0648 0748
At&t	0752
Apex	2304
Bell south	0354 2268
Bright house	1965 2022
Cable one	1965 2022
Cabletenna	0448
Cableview	0448
Cablevision	0252 1965 2022 1947
Century	0748
Charter	1965 2022 2040
Clearmaster	2578
Cisco	2022 2027
Citizen	0748
Cogeco	0752
Color voice	0848 0948
Comcast	0752 1965 2022 2027 2082 2254 2275
Comtronics	0049 0149
Contec	0249
Cox	1965 2022
Digital music express	0053
Digeo	1951 2040 2270
Director	2265
DirecTV	2276 2277 2278 2279 2286 2540 2541 2542 2543 2544 2546 2547 2548 2549 2550 2551 2552 2552 2553 2554 2555 2556 2558 2568
Dish	2577
Eastern	0349
Everquest	0049
Garrard	0748
Cg electronics	0548
General instrument	2256 2262 2265
Gemini	0255 0549
GE	0556 2286
Gi	0552 0747 0148 0752 0952 0453 0654 0754 0053 0048 0947
Hamlin	0747 0649 0749 0849 2258 2261
Hitachi	0947
Illico	0252
I3 micro	1988
Insight	1965 2022
Knology	2022
Jasco	0748
Jerrold	0552 0747 0148 0453 0947 0048 0653 0254 2256 2262 2265
LG	2576
Magnavox	0150
Mediacom	1965 2022
Memorex	0250 2255
Motorola	0552 0148 0952 0453 0654 0754 0048 0752 0254 0947 1965 1951 2027 2262 2265 2270 2271 2273 2560
Movie time	0350
Myrio	1988 2016
Nsc	0350
Oak	0249 0550
Pace	0854 1965 2022 2027 2257 2260 2274
Panasonic	0647 0452 2027 2255 2259 2275
Paragon	0250 0450 2255
Philips	0748 0549 0150 0650 0750 0850 2264 2272 2562 2575
Philips-magnavox	0152 0055
Pioneer	0449 0252 0950 0051 2022 2267 2274
Proscan	2286
Pulsar	0250 2255
Quasar	2255
Radio shack	0152 0055 0154 2561
RCA	0647 0748 0352 1956 2286 2559 2569
Realistic	0548
Regal	0849 2261 2263
Regency	0349
Rembrandt	0947
Rogers	0252 2022
Runco	0250 2255
Samsung	0049 0051 2570 2571 2574 2563 2564 2565 2566
Scientific atlanta	0451 0351 0252 0155 0852 0248 0251 2022 2257 2274
Sejin	1988
Shaw	0752 1965
Signal	0049
Signature	0947
Slmarx	0049
Sony	1947 2269 2572 2573
Sprucer	0647
Standard	0551
Starcom	0747 0453 2256
Stargate	0049
Star sight	0352
Star trak	0253
Suddenlink	1965 2022
Supercable	2262
Tandy	0651
Teleview	0049
Texscan	0551
Thomson	1956 2027
Time warner	0252 1965 2022 2040
Tivo	2082
Tocom	0048 0751 0952 0653
Torx	2256
Toshiba	0250 2255 2557 2567
TV86	0350
Unika	0448 0548 0748
United cable	0747
Universal	0448 0548 0648 0748 0851 0054
Videoway	0052
Viewstar	0149 0150 0350 0651
Video tech	0656
Videotron	0252
Wideopenwest	2022
Zenith	0951 0154 0748 0250 0753 0853 0953 2255 2266 2268
Zenith network	0354

Device SAT/DTV/WebTV

Amplica	0159
Bell expressvu	0067 0366 0167 0464
Channel master	0359 0459 0559
Chapparal	0657 0757
Cheyenne	0757
Drake	0857 0059 0360
Dreambox	0663
DirecTV	0863 0864 0564 0763 0963 0259 0260 0263 0962 0664 0065 0265 0465 0765 0866 0966 0367 0567 0362 0563 0765
Dish network	0167 0366 0464 0862 0067 0460 0560 0660
Dishpro	0460 0560 0660 0067
Dx antenna	0458 0859
Echosphere	0464
Echostar	0167 0366 0464 0862 0067 0460 0560 0660
Expressvu	0067 0366 0167 0464
Fortec star	0558 0157 0257 0357 0457 0557
Fujitsu	0760 0860
GE	0265 0566 0365 0863 0966 0666 0766 0866
Gemini	0161
Gi	0466 0665 0166 0058 0158 0258 0960 0364 0865 0965 0066
Globecast	0057
Go video	0662
Hitachi	0465 0564 0664 0864 0765 0362
Hughes network	0763 0765 0362 0659 0465 0564 0644 0864
JVC	0464 0862
Kenwood	0461
Luxor	0561
Magnavox	0259 0862 0565
Macom	0661
Mitsubishi	0765 0864 0465 0564 0664 0362
Motorola	Motorola 0466 0463
Norstat	0761
Pace	0063 0163 0266
Pansat	0060 1406
Panasonic	0264 0260 0261
Primestar	0364 0665
Philips	0259 0862 0763 0564 0664 0864 0465 0765 0565 0362
Philips-magnavox	0259 0862 0565
Pioneer	0062
Prosat	0957
Proscan	0265 0365 0666 0966 0766 0866
RCA	0265 0566 0365 0863 0467 0966 0666 0766 0866 0411
Realistic	0358 0961
Samsung	0061 0959 0962 0263 0563
Sharp	0062
Sky network	0063 0163 0266
Sierra i ii iii	0757
Sony	0963 0367 0567 0160 0861
Starchoice	0665 0166 0364
Star sight	0964
Star trak	0462
Sts	0458 0658 0758
Super guide	0562
Sylvania	0759
Toshiba	0765 0864 0465 0564 0664 0362 0858 0064 0164 0764
Ultimate TV	0966 0567
Uniden	0964 0958 0762
United	0361
Video cipher ii	0059
Web TV	0862 0160
Zenith	0363 0065 0267 0161 0266 0857 0059 0360 0165

PROGRAMMING CODES

Note: This is a quick reference guide for all the programming codes.

COMBINED POWER	9995
STB PUNCH-THROUGH	9990
TV PUNCH-THROUGH	9991
INDIVIDUAL PUNCH-THROUGH	98 [TV]/[STB] _
INDIVIDUAL KEY UNLOCK	900_
DEVICE MODE LOCK	9999
RESET TO FACTORY	9760
RESET TO 1-DEVICE MODE	9761
RESET TO 2-DEVICE MODE	9762
RESET TO FACTORY	9760
Enable/Disable Input	9769

For instructions on operating this remote as a 2-Device remote, please go to anderic. com and download the RRH200 operating manual.